




CONTENTS

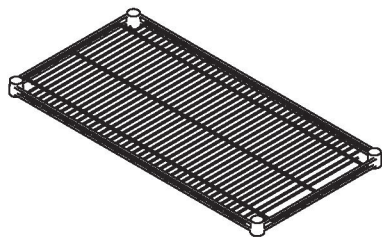

A Screen



B Round Post

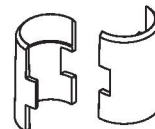

C Plastic Clip





D Leveling Glides
(Remark)

Install Sequence

1. Choose the optimum location on the post to install screens and mark the location.
2. Install the shelves from lower to higher.
3. Install the clips at the desired place on each post.
4. Slide screen shelf down posts to firmly rest on clips.
5. Continue with next set of clips and shelf.


Remark:

When using the shelving without tracks (free standing) insert leveling glides for stability-adjust for un-even floors. **D**

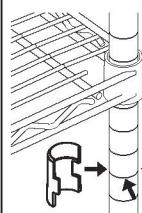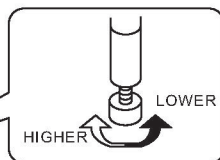

NARROW
↓
WIDE


Install the clip to the furrow of post firmly. Make sure they combine tightly. Ridge inside clips should be toward the top.

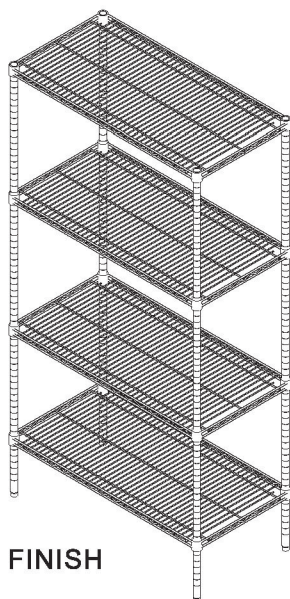

FINISH




With bolt inserted

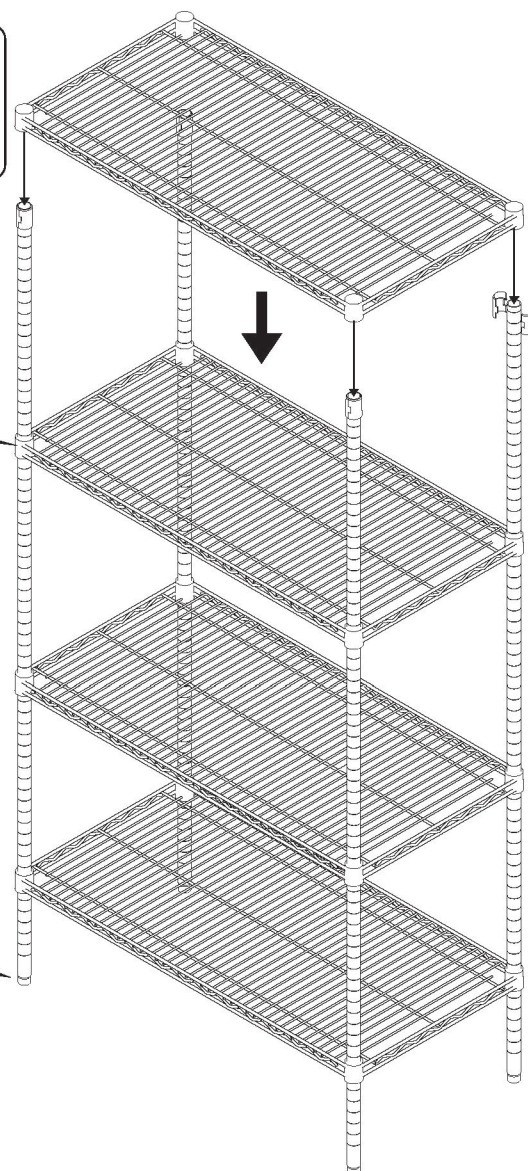


CAUTION: To avoid tipping, load unit from bottom up.

Install Sequence of sliding track


1. Put sliding track on the flat ground and install barricade on the fore-end/rear-end track. (must be installed to prevent the shelving from derailing).
2. Add middle tracks (if applicable), step on the joint to fit it tightly.
3. Put adjustable pins (H) into slots on roller assemblies and fit them to the ridge on the tracks.
4. Carefully stand the shelving units up on to the pins and make sure units are seated fully. One pin on each roller is adjustable to help with this.

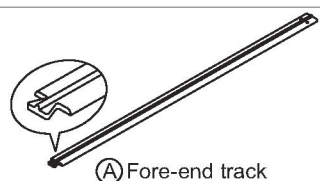

(A) Fore-end track

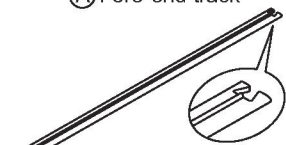

(B) Rear-end track

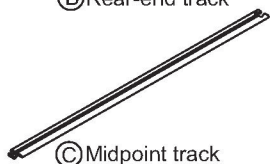

(C) Midpoint track




(D) Barricade



(E) Nut










(F) Allen key

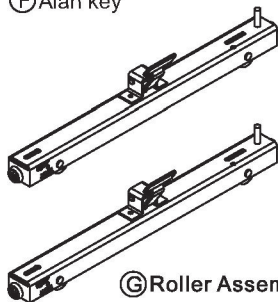

(G) Roller Assembly



(H) Adjustable Pin

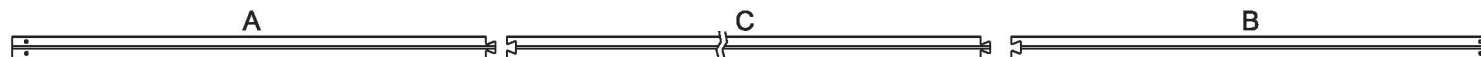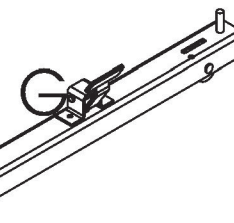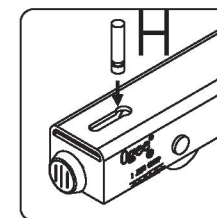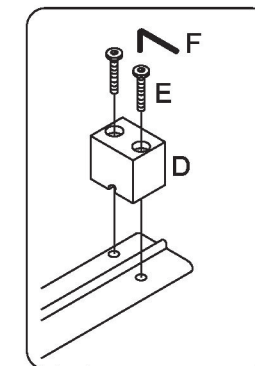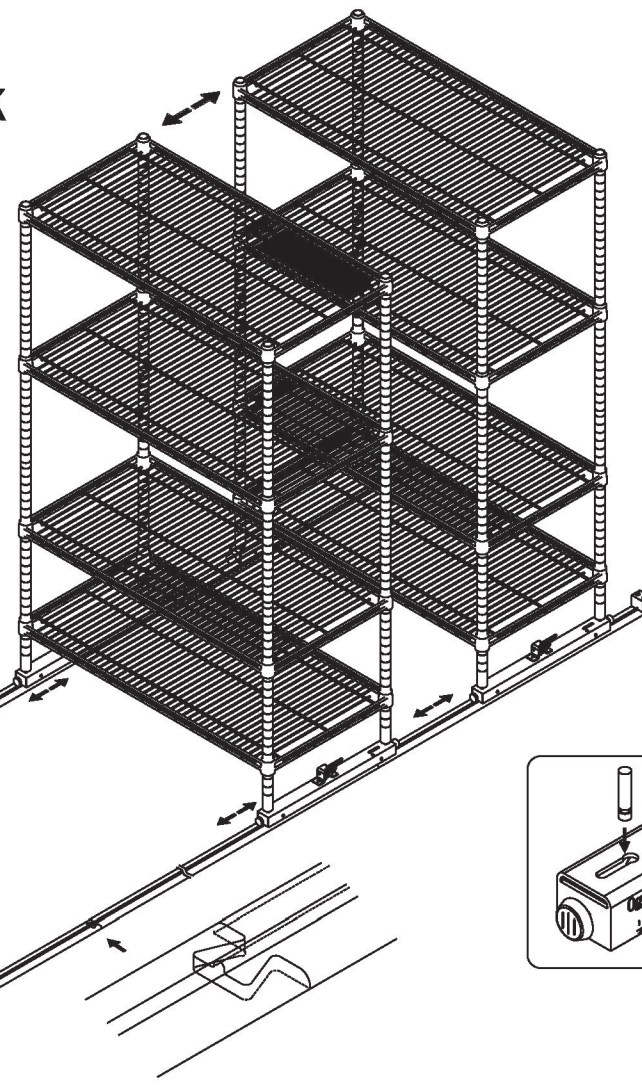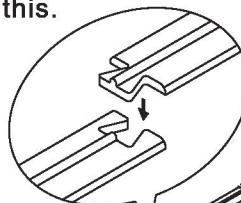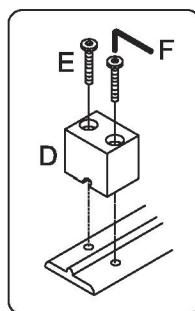

Midpoint track

CAUTION: To avoid tipping,
load unit from bottom up.